

Tow Secure


Installation Instructions

Once fully installed, please refer to the Operating Instructions for testing and how to operate the unit.

The system uses the house battery as its power source via a wiring loom (supplied) to connect the house battery to the control module. Please ensure the battery is connected only after the installation is complete.

Installation of Breakaway switch

Mount the breakaway switch on the A-frame of the trailer as close to the front of the trailer as possible.

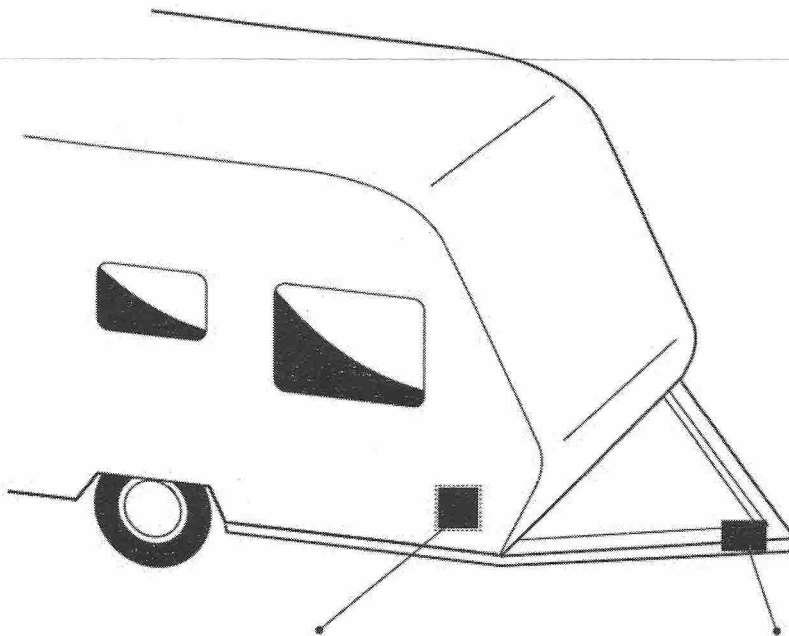

MOUNT CONTROL MODULE
INTERNALLY IN DRY AREA.

MOUNT BREAKAWAY SWITCH AS
CLOSE AS POSSIBLE TO THE FRONT.

Installation of Control Module

The tow secure control module should be mounted in a dry location. If the unit can only be mounted externally in a wet location, then the module needs to be protected with a rain cover.

Please note the control module is not waterproof. Water damage is not covered by warranty.

Wiring Schematic:

6 Pin Connector:

Black	+ve 12V input from tow vehicle ignition
White	Ground
Red	+ve 12V output to stop lights
Blue	+ve 12V output to trailer brakes
Orange (*2)	To breakaway switch

2 Pin Connector:

Red	+ve House battery terminal
Black	-ve House battery terminal